


48V programmer SOP


Controller connection diagram

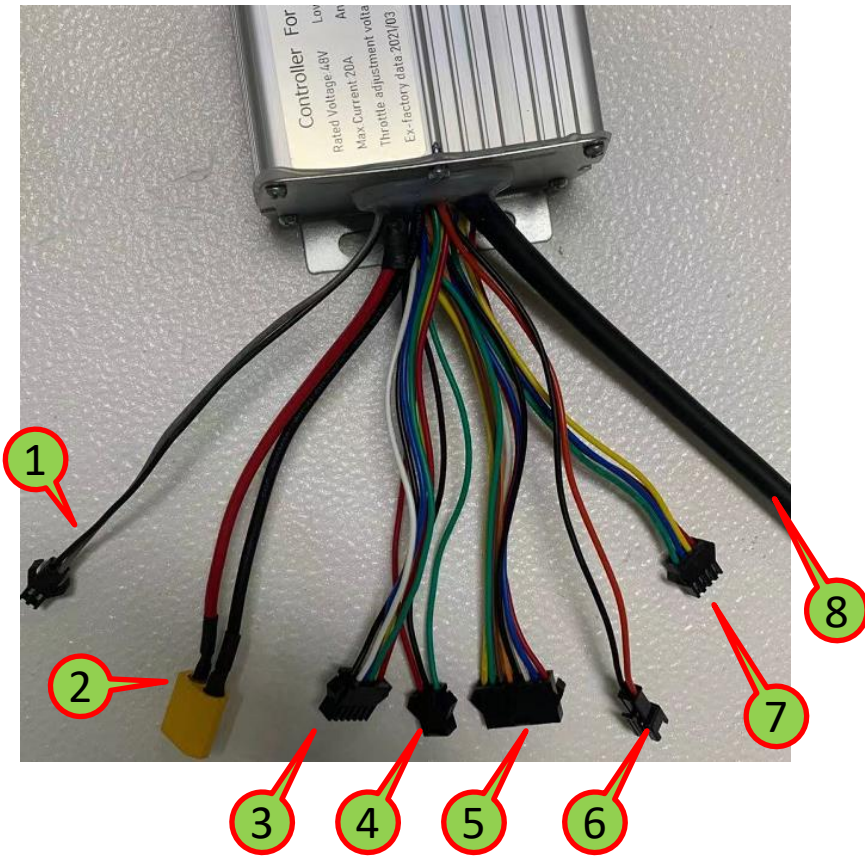


- 1#: dismiss ABS brake
- 2#: power input
- 3#: programmer input
- 4#: ABS brake dip switch
- 5#: dashboard input
- 6#: Buzzer output
- 7#: Switch of forward and backward function
- 8#: Motor output

48V programmer SOP

Programmer connecting instruction:

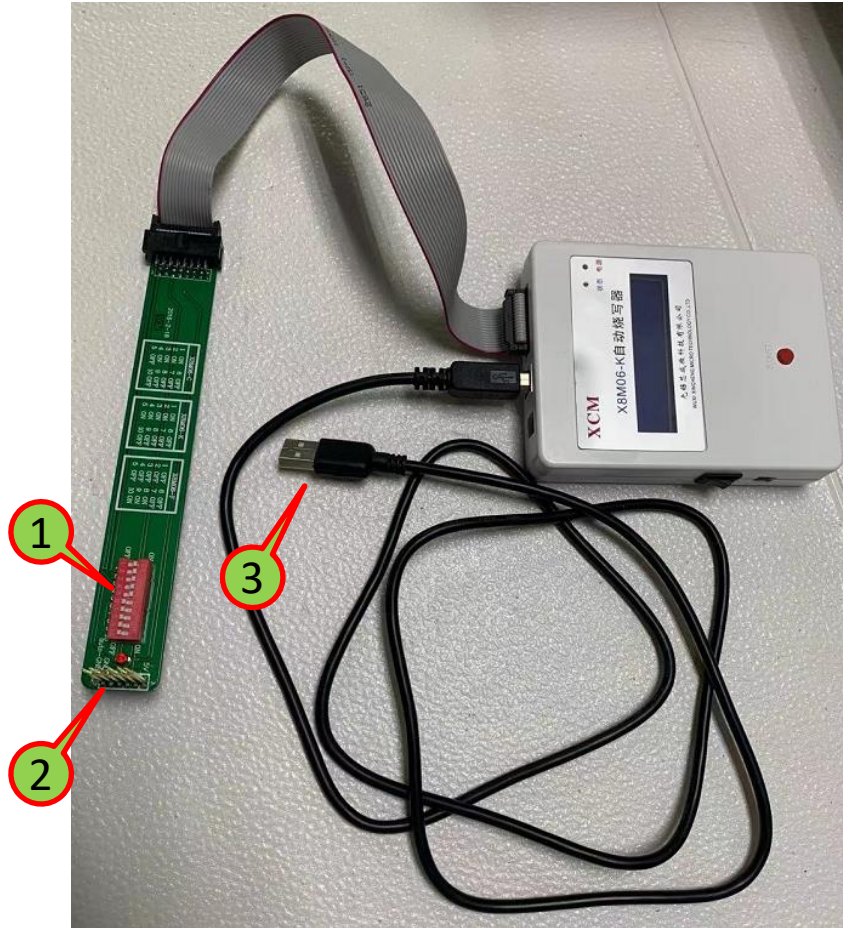


1

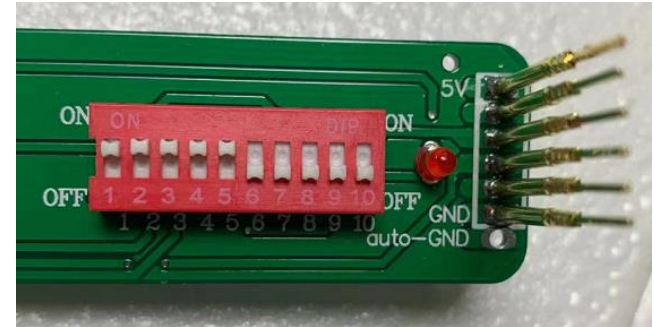

1#: switch ON 1.2.3.4.5
switch OFF 6.7.8.9.10

2

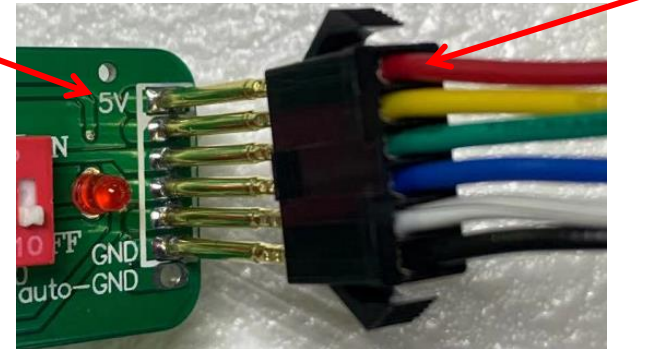

2#: PIN needle 5V corresponds to the red cable
of controller

3

 


3#: connect USB cable to the USB port of computer

48V programmer SOP

Programming steps:


1: Unzip “客户端V1.4.rar”




2: Click “Pro_Client.exe”

名称	修改日期
images	2021-05-15 10:46
Pro_Client.exe	2015-09-01 13:15
pt160325_130507.afi	2016-03-25 13:05
RemoteFresh.exe	2015-03-09 23:21
system.ini	2015-05-23 8:00


3: Click on “程序下载”

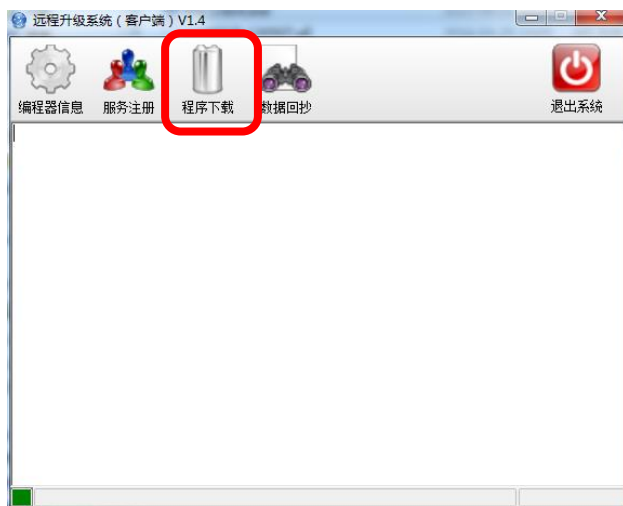

4: find the programmer and import

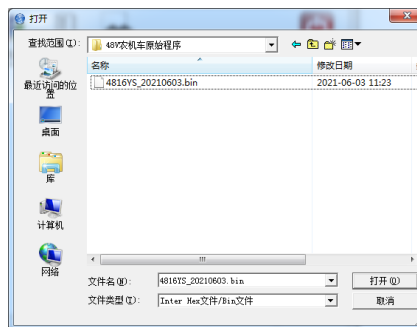

5: Showing successful downloading “烧写程序下载成功”

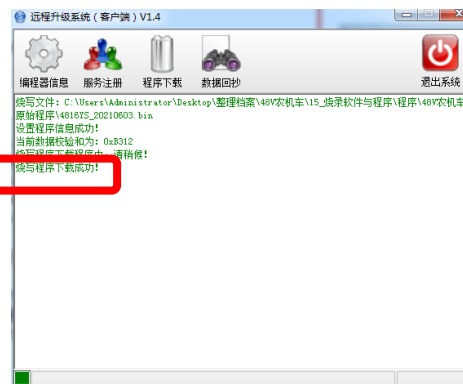

5: Check if the programmer shows OK

